



Model Модель	Art. No. № арт.
DELOS A 80×80	SDA0808-01
DELOS A 85×85	SDA8585-01
DELOS A 90×90	SDA0909-01
DELOS A 100×100	SDA1010-01



Model Модель	Art. No. № арт.
PATMOS A 80×80	4S88155-03
PATMOS A 90×90	4S99155-03
PATMOS A 100×100	4S11155-03



Model Модель	Art. No. № арт.
PATMOS A Compact 80×80	4S88155-05
PATMOS A Compact 90×90	4S99155-05




Model Модель	Art. No. № арт.
RODOS A Compact 80×80	4P88155-03
RODOS A Compact 90×90	4P99155-03

DELOS A

To be installed on floor (without legs), siphon outlet \varnothing 90 mm, recommended siphons TB90, TB21, TBXS, R500, R580, R510, R400 SLIM, R400W SLIM.

Поддон для монтажа непосредственно на пол (необходимо приклеить на раствор или пену с низким коэффициентом расширения), отверстие под сифон \varnothing 90 мм, рекомендуемые сифоны TB90, TB21, TBXS, R500, R580, R510, R400 SLIM, R400W SLIM.

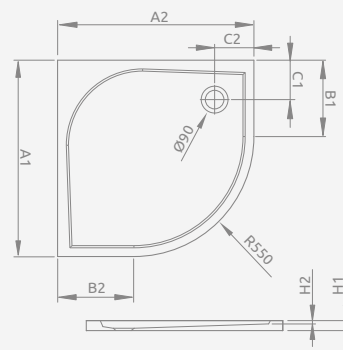


DELOS A	A1	A2	B1	B2	C1	C2	H1	H2
80×80	800	800	250	250	180	180	45	12
85×85	850	850	300	300	180	180	45	12
90×90	900	900	350	350	180	180	45	12
100×100	1000	1000	450	450	180	180	50	12

PATMOS A

Shower tray with a removable panel, siphon outlet \varnothing 90 mm, installing frame included, recommended siphons TB21, TBXS, 690 P.

Акриловый поддон со съемной панелью, отверстие под сифон \varnothing 90 мм, ножки в комплекте, рекомендуемые сифоны TB21, TBXS, 690 P.

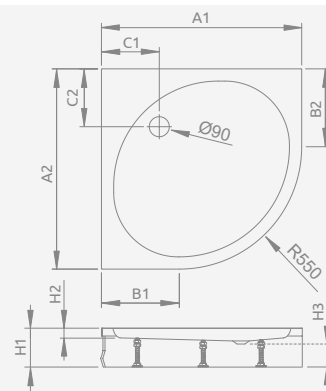


PATMOS A	A1	A2	B1	B2	C1	C2	H1	H2	H3
80×80	800	800	250	250	220	220	160	20	80
90×90	900	900	350	350	220	220	160	20	80
100×100	1000	1000	450	450	260	260	160	20	80

PATMOS A Compact

Shower tray with an integrated panel, siphon outlet \varnothing 90 mm, installing frame included, recommended siphons TB21, TBXS, 690 P.

Цельнолитой поддон, отверстие под сифон \varnothing 90 мм, ножки в комплекте, рекомендуемые сифоны TB21, TBXS, 690 P.

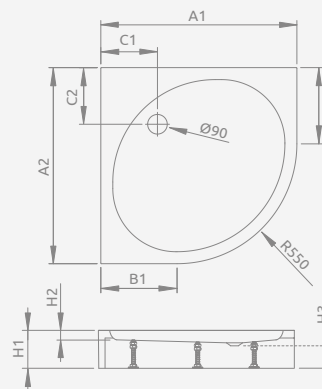


PATMOS A Compact	A1	A2	B1	B2	C1	C2	H1	H2	H3
80×80	800	800	250	250	220	220	160	20	80
90×90	900	900	350	350	220	220	160	20	80

RODOS A Compact

Shower tray with an integrated panel, siphon outlet \varnothing 90 mm, installing legs included, recommended siphons TB90, TB21, TBXS, 690 P.

Цельнолитой поддон, отверстие под сифон \varnothing 90 мм, ножки в комплекте, рекомендуемые сифоны TB90, TB21, TBXS, 690 P.

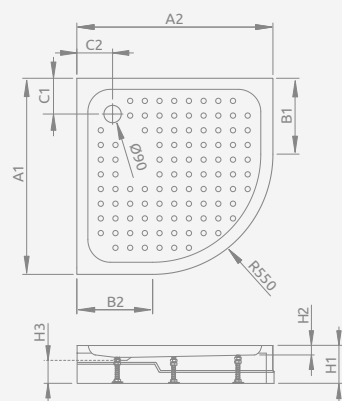

*Dimensions of bottom base of shower tray
*Размер нижней части поддона

RODOS A	A1	A2	B1	B2	C1	C2	H1	H2	H3
80×80	810*	810*	350	350	165	165	165	20	80
90×90	910*	910*	350	350	210	210	165	20	80